

## Change of nozzles

- Before changing nozzles, allow the tool to cool down, or use only combination pliers.
- Do not touch hot **nozzle (5)** and make sure to put it only on a heat resistant surface, because of the **fire hazard**.
- The nozzles are easily pushed onto the tapered **element housing (4)** and are then secured by fastening the screw on the clamp.
- Only LEISTER nozzles should be used.

## ACCESSORIES

- Use only LEISTER accessories.

## MAINTENANCE

- Clean the **welding nozzle (5)** with a wire brush.

## CONFORMITY

### EU Declaration of Conformity


**Leister Technologies AG, Galileo-Strasse 10, 6056 Kaegiswil, Switzerland** confirms that this product in the version put into circulation by us, fulfils the requirements of the following EU directives.

Directives: 2006/42/EC, 2014/30/EU, 2011/65/EU

Harmonized EN ISO 12100, EN 60335-1, EN 60335-2-45, EN 62233, EN 55014-1, EN 55014-2,

Standards: EN 61000-3-2, EN 61000-3-3, EN IEC 63000

Kaegiswil, 15/04/2021

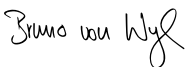

Bruno von Wyl, CTO



Christoph Baumgartner, GM

---

### UK Declaration of Conformity


**Leister Technologies AG, Galileo-Strasse 10, 6056 Kaegiswil, Switzerland** confirms that this product in the version put into circulation by us, fulfils the requirements of the following UK Statutory Instruments.

Directives: 2008 No. 1597, 2016 No. 1091, 2012 No. 3032

Harmonized BS EN ISO 12100, BS EN 60335-1, BS EN 60335-2-45, BS EN 62233, BS EN 55014-1,

Standards: BS EN 55014-2, BS EN 61000-3-2, BS EN 61000-3-3, BS EN IEC 63000

Kaegiswil, 01/04/2021

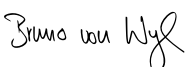

Bruno von Wyl, CTO



Christoph Baumgartner, GM